

Front door

Front door trim panel

Removing and installing front door trim panel

Disconnect the negative battery harness. Refer to Battery Assembly

Use a flat screwdriver to pry open the front door inner handle screw cover plate (as shown in the figure below), and then use a cross screwdriver to remove the fixing screws (as shown in the figure below).

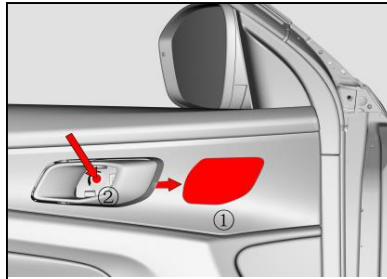


Figure 163:

Remove the fixing screws at the handle box of the front door inner trim panel (as shown in the figure below (3)), and then remove the fixing screws with a cross screwdriver (as shown in the figure below (4)).



Figure 164:

Use a plastic screwdriver to remove the front door interior trim panel glass lift button panel assembly.

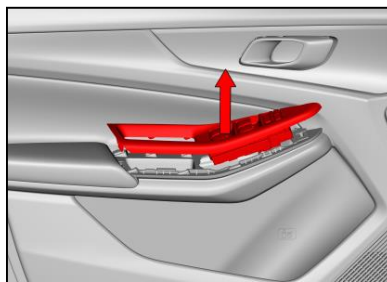
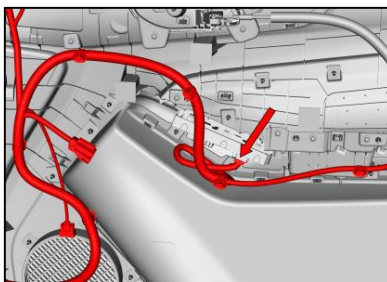
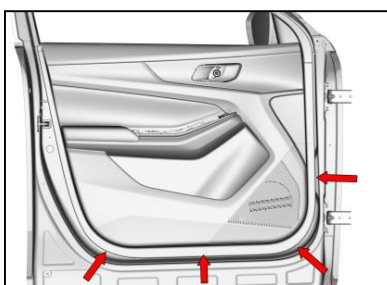


Figure 165:

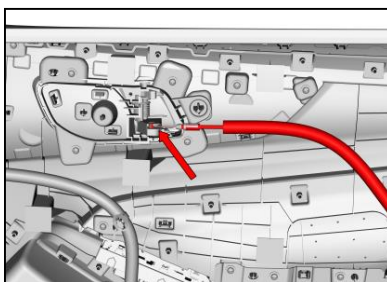
Remove the front door interior trim panel glass lift button panel and disconnect the power window switch harness plug.

**Figure 166:**

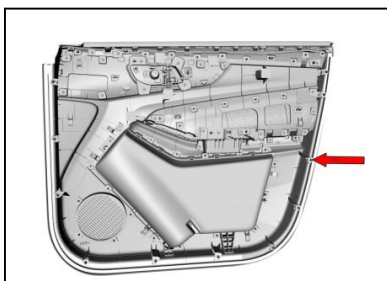
Use a plastic screwdriver to pry open the front door trim panel.

**Figure 167:**

Remove the front door inner handle cable.

**Figure 168:**

Remove the front door trim panel and snap it as shown.

**Figure 169:**

Installation