



KX11 Multi-Media Interface(MMI)





Contents

Multi-media System Function

Maintenance and Diagnosis

Overview



Central control panel



Functions

- Audio and video entertainment system
- APA (Flagship configuration)
- AVM System
- Mobile phone mirror-link + Bluetooth function
- System setting
- Vehicle setting

> Passenger control panel (Flagship configuration)





Contents




Overview

Multi-media System Function

Maintenance and Diagnosis




Desktop

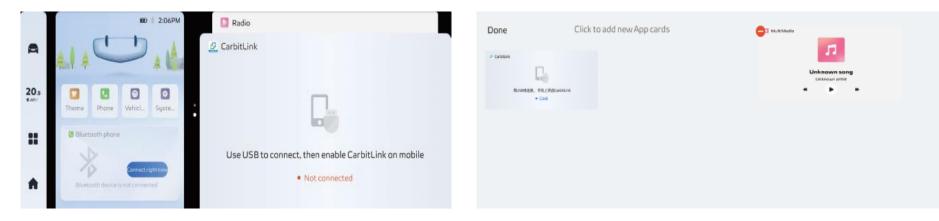

Smart area has been added to the system desktop, which mainly displays avatars, smart scene recommendations, and advertising operations. A variety of widgets are provided on the homepage, and the widget can be edited by long pressing the current card. The available widgets include multimedia, smart life and so on.



Drop-down menu

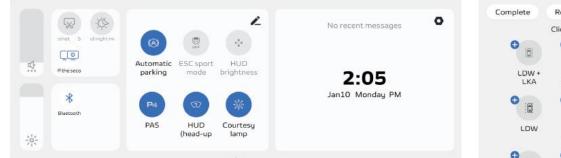




- Sliding from the top can drag the menu bar out, and can quickly switch between various states. Including wireless charging, lane keeping assistance, daytime running lights, smart taxi, pilot only, atmosphere lights, driving video restrictions, touch screen sounds, speed limit reminders, quick configuration of vehicle settings, and brightness and volume adjustments.
- You can also add and delete quick configuration items in the drop-down bar by long-pressing the blank space.



Radio

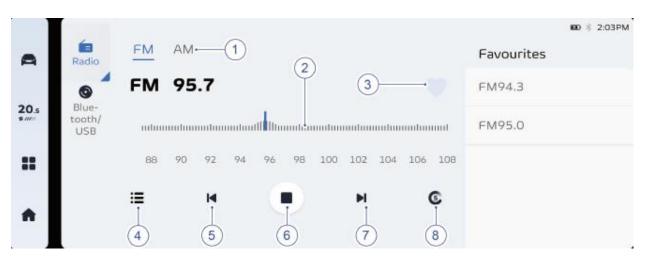

1.FM and AM switching

2. Drag to select channel

3. Add to Favorites

4.Station list: you can view the scanned stations

5. Previous channel


6. Pause the radio

7. Next channel

8. 5seconds carousel



USB and Bluetooth Music

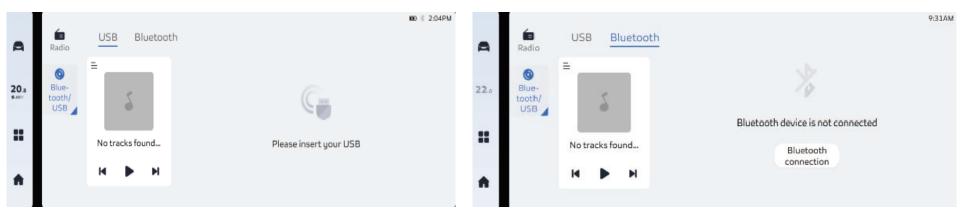

After inserting the U disk, the music files in the U disk can be read


and played.




After the mobile phone is connected to Bluetooth, the music in the mobile phone can be played via Bluetooth.



Playlist song changing

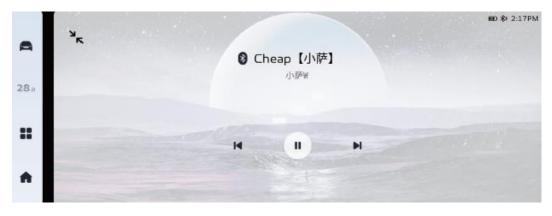

You can perform the previous, next, pause, and change songs on the music in the playlist.

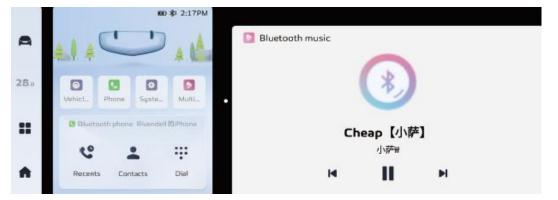

When the desktop has a multimedia widget, you can perform playback control directly on the desktop.



Bluetooth Connection

× Connection	Voice Display System	
Bluetooth	Bluetooth	Paired devices Up to 8 devices can be paired
	Name of host Geely1 >	Rivendell 的iPhone Connected ① iPhone Disconnected ①
	Device visibility	Available devices Refresh
	Restore to default setting of Bluetooth	Rivendell 的iPhone

Allow Contacts and Favorites Sync?

Your car may request your contacts, phone favorites, and recent phone calls over Bluetooth. Do you wish to allow this?

Don't Allow

Allow

< Bluetooth	Geely1	
Name		Geely1 >
Device Type		8
Sync Contact	5	
GROUPS		
Phone Favorit	es	~
Phone Recent	ts	~
All Contacts		~

Open [System settings]-[Connection]-[Bluetooth]

Turn on the Bluetooth of the vehicle and the Bluetooth of the mobile phone at the same time;

Select [Connect] and select your mobile phone Bluetooth for pairing. You will receive a paired message alert on your phone.

Android phone: Please check "Sync contacts" when connecting;

iPhone: Please ensure that the "Sync contacts" function is checked.

If you cannot sync your contacts, click the corresponding Bluetooth name to unpair and reconnect.

Dial




Dialing method: 1. Use the dial keypad to dial

Answer and hang up: Answer and hang up with the answer and hang up buttons on the steering wheel.



- 1: Hang up
- 4: Answer

Sound

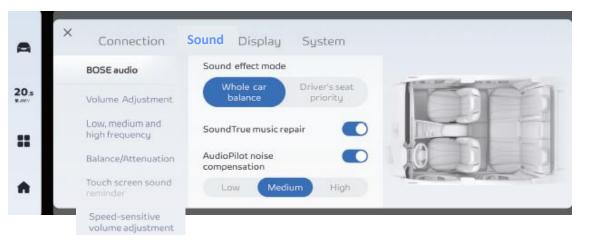



- Bose audio
- Volume Adjustment
- Low, medium and high frequency
- Balance/Attenuation
- Touch screen sound reminder
- Speed-sensitive volume adjustment

The volume control can also be adjusted in the drop-down menu bar.





Display

-	×	Connection	Voice Display System	
		Screen brightness	Adjust instrument/switch brightness	
20.5		Co-driver's screen	According to the regulations,	
		Theme settings for day and night	Screen brightness Auto Bright Dim	
۸			Screen brightness	

Open [System Settings]-[Display]

- Screen brightness
- Passenger screen
- > Theme setting for day and night




The screen brightness can also be adjusted in the drop-down menu bar.



System

×	Connection	Voice Display S	System	
	Time	Time display format		
2.0	Unit settings	12h	24h	
		Date format		(C)
:	Language settings	YY/M/D D/M/YY	M/D/YY	
	Notice settings	Automatic time		
•	While driving			
	entertainment is			

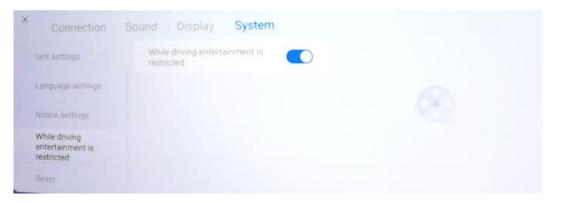



Open [System Settings]-[System]


- ≻ Time
- Unit settings
- Language settings
- Notice settings
- > While driving entertainment is restricted
- Reset : Restore factory settings



Vehicle Setting

Go to [Vehicle Settings]


There are options for lighting, safety, comfort, wireless charging, system, etc. It provides common settings related to the vehicle, which can provide you with a better driving experience and safety protection settings.

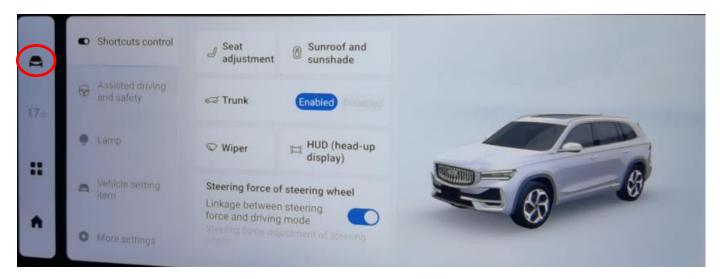

- Shortcuts control : Seat, Sunroof, Trunk, Wiper, HUD, Steering force
- > Assisted driving and safety : ADAS functions setting
- Lamp : Ambient lamp, Welcome lamp...
- Vehicle setting item: Keyless entry, Remote lock, Trip reset...
- More settings : Engine start-stop, APA, Wireless charging, ESC off...




Phone Mirror-link

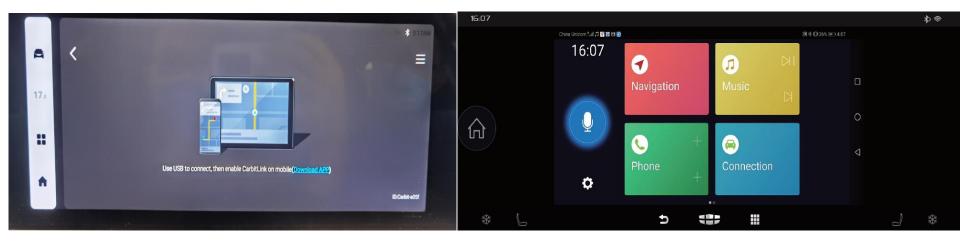

Applicable to Android and iOS mobile phones. Both Android and IOS mobile phones use USB connection.



A/C & Seat Heating/Ventilation

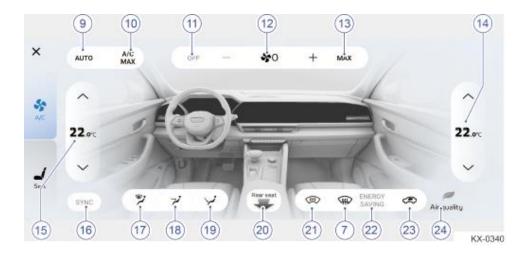







AVM (360° panoramic image)



1. Return Exit the Panoramic Image Interface

2. Parking guiding lines

Touch this button to turn on/off the parking guiding lines. The button operation state is memorized when the system is activated next time

3. 3D view Switch to 3D view

4. Multi-view mode

Open the multi-view selection menu for more optional views.

5. Settings

It's available to set the top view zoom-in, obstacle detection, steering linkage, 3D surrounding effect, and transparent vehicle model effect.

6. Radar alarm sound

Turn on/off radar alarm sound. In addition to function buttons above, directly touch camera icons around the panoramic image vehicle model to quickly change the viewpoints of images.



PAS (Parking assist system)









1. Turn off/on

Start the engine, and the parking assist system is automatically enabled. Customer can turn it off on the MMI vehicle setting.

(For GL configuration, only 4 rear parking assist radars using for PA-rear function; For GD & GF configuration, there are front and rear parking assist radars.)

2. PAS volume

Customer can select the PAS alarm volume level on MMI system setting, sound, volume adjustment.

3. Intelligent recommendation for parking (AP)

- For GF configuration, there are AP function (automatic parking).
- The intelligent recommendation for parking is enabled by default. After the intelligent recommendation for parking is enabled, the automatic parking system will automatically judge to park in or out based on the environment.
- Customer can disenable it on MMI vehicle setting.

Driving Mode





Comfort mode is default.

Rotate the driving mode selector switch to switch to economy mode, comfort mode, sports mode, intelligent mode, snow mode, off road mode or sand mode. (Sand mode not available on some markets)



Contents



Overview

Multi-media System Function

Maintenance and Diagnosis

DTC



吉利沒车 Diagnostics Software							≣	_з о	Ф
	VIN: LB37852Z9MS018450 Model/Year/Chassis: KX11, 2021, 018450		Connection:		irtual #2 ❥ Driving				
Network 🚝	ECUs Other	DTCs	Documents	Wiring Diagrams	Parameters	Activations	Diagno	stic Sequ	▶ ₹
Fault Tracing 🛤	ID Name	Confirmed	Unconfirmed Al	II DTCs				ē	7
Components	4/185 Infotainment Head Unit (IHU)	DTC							
Service Functions	4/185_1 Infotainment Head Unit1 (IHU1)	IHU-B123811 IHU-B123812 IHU-B123813 IHU-B128D1 IHU-B128D1 IHU-B139611 IHU-B139711 IHU-B139711 IHU-B139713	1 Speaker Amplifier. 2 Speaker Amplifier. 3 Speaker Amplifier. 1 Rear Camera. Ge 3 Rear Camera. Ge 1 Left Camera Modu 3 Left Camera Modu 1 Right Camera Modu 3 Right Camera Modu 1 Front Camera. Ge	odule. Bus Signal / Mess General Electrical Failu General Electrical Failu General Electrical Failu eneral Electrical Failures aneral Electrical Failures ule. General Electrical Failures dule. General Electrical F dule. General Electrical Failures meral Electrical Failures	Ires. Circuit short to g Ires. Circuit short to Ires. Circuit short to grou Circuit short to grou Circuit open. ailures. Circuit short ailures. Circuit short Failures. Circuit shor Failures. Circuit open.	ground. battery. und. to ground. rt to ground. n.			<


Update/Reload Software



After connecting the vehicle to GLDS, choose "Software" module, click "All", search "IHU", there will be a list showing all the available software of this unit's IHU module, if the software is the latest, there will be no "upgrade" software, only "reload".
 After replacing a new IHU, there are no software inside, you need reload IHU software into it.

🕿 Geely Diag		em											— ť		× 戢陈
吉利浸车		ostics Software)									≡	ć		Ф
VIN: LB37852Z9MS018450 Model/Year/Chassis: KX11, 2021, 018450							Connection: <>		ø						
Purchase	Software	Download S	oftware									A	dvanced 1	Fest	٦
Find/Add So	ftware							Order Queue	Order History	Query Order					
 8892 8892 	Number 917116 676032	e Changes Function Description IHU IHU CEDINICATE IHU reload IHU1 RELOAD	n Chang s	Comments	Size (1145 2797 3819635	Download Time	€ ♥ (min)			n the queue now. lect and add softv	vare from the list to order				
Add Softwa	are														



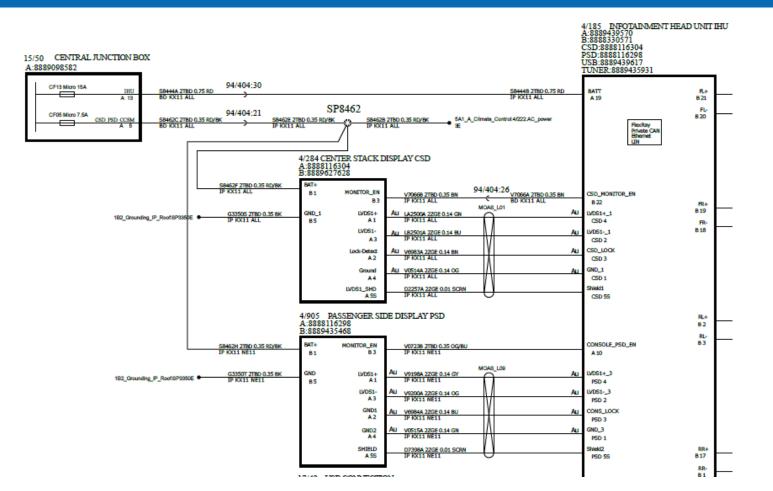




AVM system calibration procedure:

Step 1: Calibration site preparation and vehicle placement

Prepare a clean, empty and flat area (10 meters * 6.4 meters or more is recommended), park the vehicle in the middle of the site and reserve enough front, rear, left, and right areas for laying calibration mat.


Step 2: Laying the calibration mats

There are 4 calibration mats, which are the front calibration mat, the rear calibration mat, the left calibration mat, and the right calibration mat.

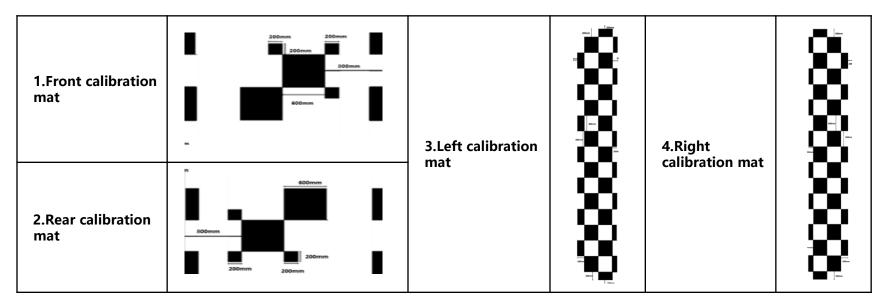




a. First of all, the 4 calibration mats need to be spliced around the vehicle according to the method shown below.

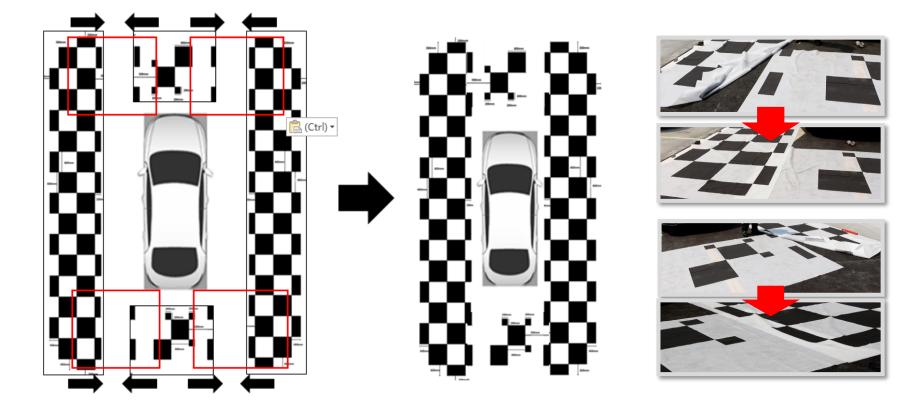


b. Place the front layout at a distance of 1950mm from the ground contact point of the front wheels of the vehicle to the calibration mat position as show below, and ensure that the calibration cloths on both sides are consistent with the distance of the vehicle.

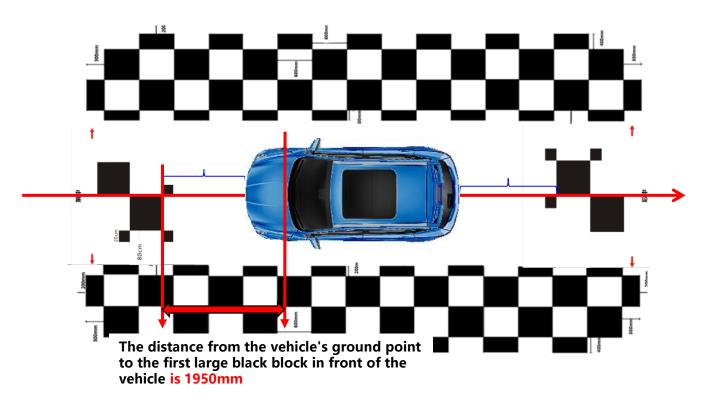



Step 3: Enter factory mode

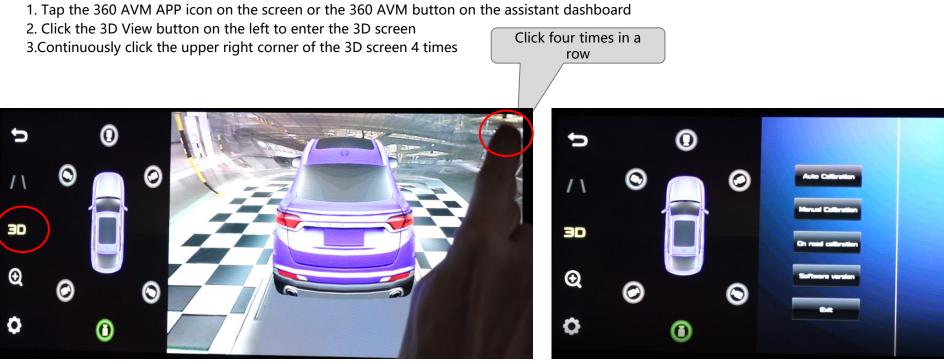



Step 4: Select / Start Auto or manual Calibration

After clicking the "manual Calibration" button, enter the calibration screen, and then click the direction buttons for calibration





Step 5: Calibration result selection

After the calibration is completed, it will show are you sure to save and exit. If the calibration is successful, you should click yes, otherwise, you should click no.





Step 6: Check the calibration results

Before calibration:



After calibration:

After the calibration is completed, the calibration pattern in the red dotted frame of the panorama screen will change when the calibration "Calibration Success"

- 1. After successful calibration, all 4 calibration patterns are displayed completely and evenly distributed.
- 2. The calibration pattern is displayed clearly
- 3. The size of the black and white blocks in the center of the same calibration pattern is the same



For KX11 model AVM/PAS function, you can also choose on road calibration.

Step 1: Enter factory mode

1. Tap the 360 AVM APP icon on the screen or the 360 AVM button on the assistant dashboard

2. Click the 3D View button on the left to enter the 3D screen

3.Continuously click the upper right corner of the 3D screen 4 times






Step 2: Choose On road calibration



Step 3: Start calibration

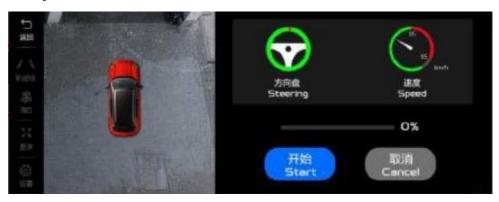

- During calibration, keep driving speed slower than 35 km/h;
- During calibration, keep driving straight, if steering wheel angle exceed the limit, there will be a prompt of correct the steering wheel;



Step 4: Finish calibration



After calibration finished, there will be a prompt, if you confirm the calibration result is ok, click " application", if not, click "Exit".



快乐人生 吉利相伴

1760, Jiangling Road, Binjiang District, Hangzhou, Zhejiang Province, P, R.China, 310051

www.geely.com

No.918, Binhai 4th Rd. Hangzhou Bay New District,

造每个人的精品车