


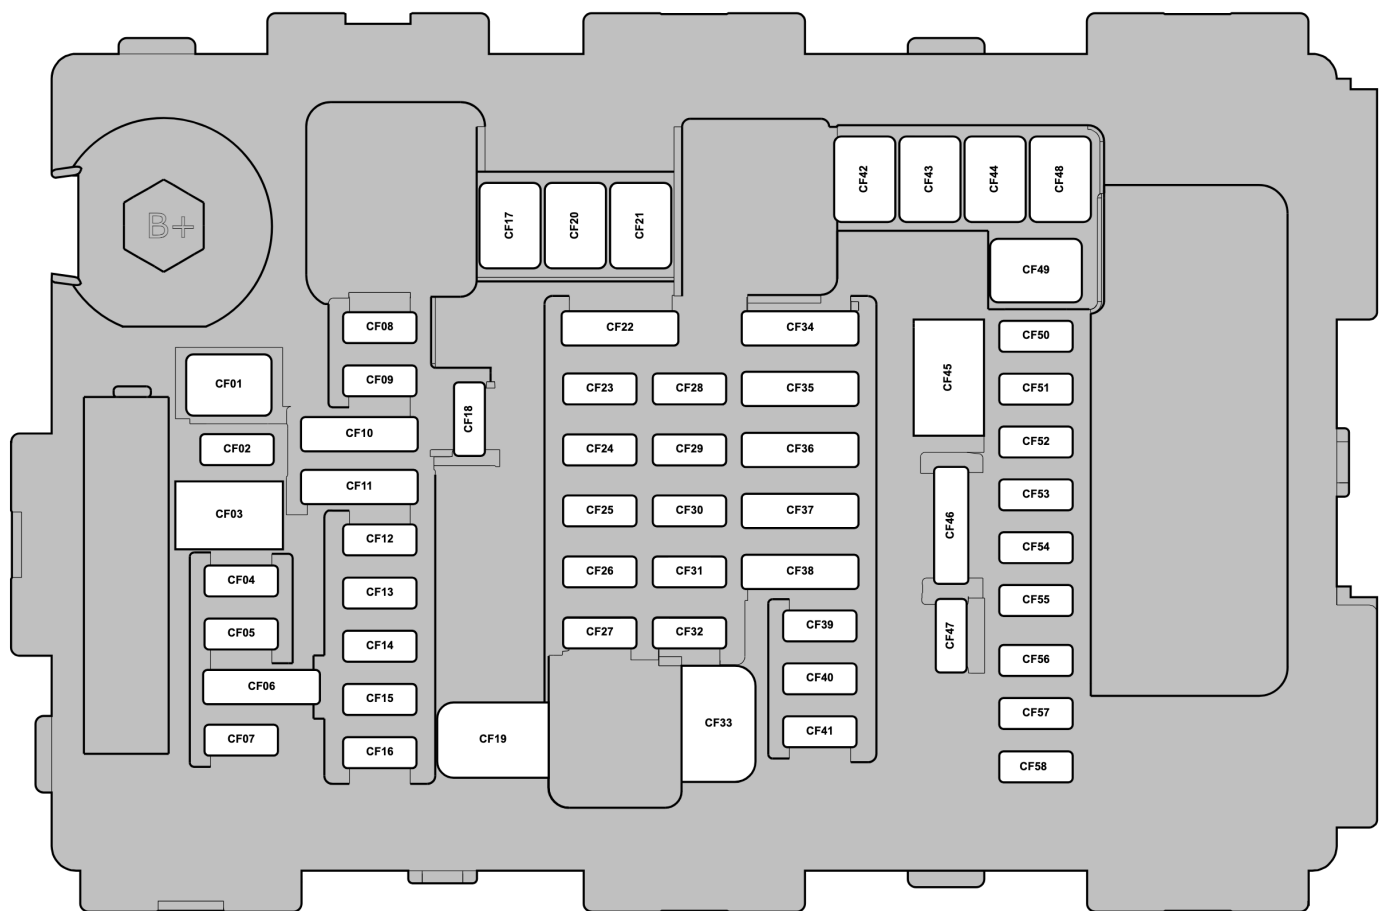

Fuse No.	Fuse ID	Ampere	To Component	Via
1	CF01	30	Power Operated Tailgate Module (POT); Default; 4/116	
5	CF05	5	Supplemental Restraint System Module (SRS); Default; 4/176	
6	CF06	10	Ambient light module ALM; 11; 4/715 Ambient light module ALM; 22; 4/726 Ambient light module ALM; 17; 4/721 Ambient light module ALM; 23; 4/727 Ambient light module ALM; 12; 4/716 Ambient light module ALM; 18; 4/722 Ambient light module ALM; 13; 4/717 Ambient light module ALM; 19; 4/723 Driver seat connection; Default; 22/3 Ambient light module ALM; 25; 4/729 Ambient light module ALM; 15; 4/719 Ambient light module ALM; 6; 4/710 Ambient light module ALM; 7; 4/711 Ambient light module ALM; 2; 4/706 Ambient light module ALM; 8; 4/712 Ambient light module ALM; 4; 4/708 Passenger seat connection; Default; 22/4 Ambient light module ALM; 5; 4/709 Ambient light module ALM; 30; 4/734 Ambient light module ALM; 20; 4/724 Ambient light module ALM; 21; 4/725 Ambient light module ALM; 10; 4/714 Ambient light module ALM; 16; 4/720	
7	CF07	15	Interior Light Control Module (ILCM); Default; 4/521	
9	CF09	15	Steering Wheel Module (SWM); Default; 3/254	
10	CF10	5	Air fragrance unit; Default; 4/433	
11	CF11	5	Airborne particle sensor; for interior air; 4/480	
12	CF12	20	Headlight unit; right; 10/2	
13	CF13	20	Headlight unit; left; 10/1	
15	CF15	20	12 V socket, luggage compartment; Default; 17/19	
16	CF16	10	Battery Energy Control Module (BECM); Default; 1/4	
17	CF17	40	Central Electronic Module (CEM); Default; 4/56	

Fuse No.	Fuse ID	Ampere	To Component	Via
17	CF17	40	Central Electronic Module (CEM); Default; 4/56	
19	CF19	30	Driver seat connection; Default; 22/3	
20	CF20	40	Central Electronic Module (CEM); Default; 4/56	
21	CF21	30	Rear Seat Module (SMB); Default; 4/428	
22	CF22	7.5	Head-up Display (HUD); Default; 4/228	
23	CF23	10	Driver seat connection; Default; 22/3 Passenger seat connection; Default; 22/4	
28	CF28	20	Driver Door Module (DDM); Default; 4/468	
29	CF29	20	Rear Left Door Module (RLDM); Default; 4/539	
30	CF30	10	Climate Control Module (CCM); Default; 4/154	
31	CF31	7.5	Rear Seat Entertainment Module (RSEM); Default; 16/109	
32	CF32	20	Passenger Door Module (PDM); Default; 4/469	
33	CF33	25	Audio Control Module (AUD); Default; 4/218	
34	CF34	10	Center console switch module CCSM; Default; 4/222 Center Console Display (CCD); Default; 4/284 Diagnostic socket OBD II; Default; 17/13	
35	CF35	5	Steering Wheel Module (SWM); Default; 3/254 Electronic toll collection unit; Default; 4/565	
36	CF36	10	Bluetooth transceiver; rear bumper; 16/292 Bluetooth transceiver; front right door; 16/277 NFC Key Reader Module (NKR); Default; 4/691 Driver Information Screen (DIS); Default; 4/487 Bluetooth transceiver; trunk; 16/293 Bluetooth transceiver; front left door; 16/276 Bluetooth transceiver; left B-pillar; 16/348 BLE NFC Communication Module (BNCM); Default; 4/690	
37	CF37	5	Telematics and Connectivity Antenna Module (TCAM); Default; 4/313 Electronic Gear Selector Module (EGSM); Default; 4/197 Interior carbon dioxide sensor; Default; 4/542 Digital Video Recorder Module (DVR); Default; 4/489 Rain and light sensor RLSM; Default; 4/162	

BLE NFC Communication Module (BNCM); Default; 4/690			
37	CF37	5	Telematics and Connectivity Antenna Module (TCAM); Default; 4/313 Electronic Gear Selector Module (EGSM); Default; 4/197 Interior carbon dioxide sensor; Default; 4/542 Digital Video Recorder Module (DVR); Default; 4/489 Rain and light sensor RLSM; Default; 4/162
38	CF38	10	Wide Angle Vision Module (WAM); Default; 4/249 Vehicle Gateway Module (VGM); Default; 4/314
39	CF39	20	Autonomous Driving Control Unit (ADCU); Default; 4/355
40	CF40	20	Suspension Module (SUM); Default; 4/84
41	CF41	10	USB charging hub; tunnel rear; 17/60 USB charging hub; rear seat; 17/71
42	CF42	40	Rear Seat Module (SMB); Default; 4/428
43	CF43	25	Power Operated Passenger Door (PPOD); Default; 4/465
45	CF45	30	Passenger seat connection; Default; 22/4
46	CF46	10	USB port; Default; 17/42 Wireless Phone Charger (WPC); Default; 4/312
47	CF47	20	Rear Right Door Module (RRDM); Default; 4/540
49	CF49	40	Blower module; Default; 4/189
50	CF50	7.5	Sun visor light; left; 10/114 Sun visor light; right; 10/115 Glovebox lid switch; Default; 3/36 Interior rear view mirror module IRMM; Default; 4/171 Overhead console unit; Default; 4/198
51	CF51	5	Driver Monitoring Module (DMM); Default; 4/224
53	CF53	15	Adjustable steering column module; Default; 4/168
54	CF54	20	12 V socket, center console; Default; 17/44